

COBY®

MP-C7052

Mini MP3 Player with Video and FM Radio



Instruction Manual

Please read this manual carefully before operation.

PRECAUTIONS

	CAUTION <i>RISK OF ELECTRIC SHOCK</i> <i>DO NOT OPEN</i>	
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		

For Customer Use:

Enter below the serial number that is located on the bottom of the unit. Retain this information for future reference.

Model No. MP-C7052

Serial No. _____



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

WARNING:

To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

CAUTION:

To prevent electric shock, match wide blade of plug to wide slot of outlet and fully insert.

WARNING:

Handling the cords on this product will expose you to lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. ***Wash hands after handling.***

NOTICE:

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Protect your hearing:

Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.



For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org.

PRECAUTIONS

Regulatory Information

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

If the product suddenly has no response or powers off, an electrostatic discharge may be the cause. In this circumstance, please follow the procedures below for recovery:

- Turn off the unit by pushing and holding the slide button at the right (Power off position) for 15 seconds.
- Turn on the unit again


IMPORTANT SAFETY INSTRUCTIONS

1. **Read Instructions:** All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions:** The safety and operating instructions should be retained for future reference.
3. **Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and usage instructions should be followed.
5. **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. **Water and Moisture:** Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. **Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. **Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
11. **Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
12. **Grounding or Polarization:** This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
14. **Protective Attachment Plug:** The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.



IMPORTANT SAFETY INSTRUCTIONS

15. **Outdoor Antenna Grounding:** If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANS/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode (see figure).

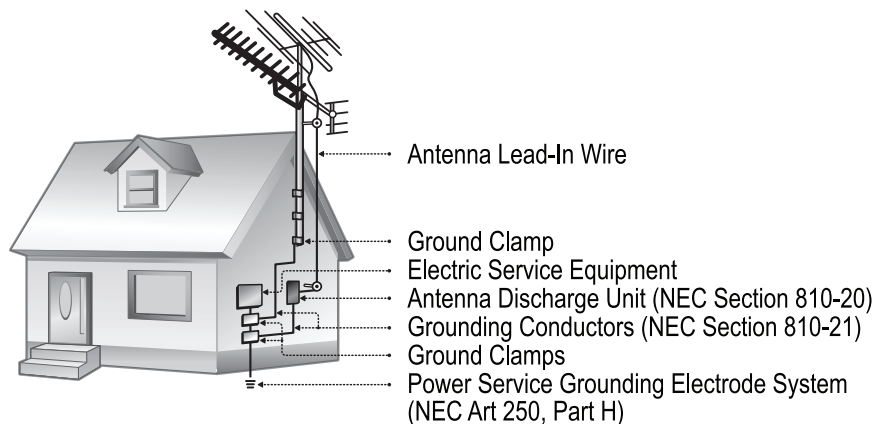

16. **Lightning:** For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
17. **Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
18. **Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
19. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. **Damage Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.

IMPORTANT SAFETY INSTRUCTIONS

22. **Replacement Parts:** When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. **Safety Check:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
24. **Wall or Ceiling Mounting:** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. **Heat:** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

FEATURES

- Integrated 512MB Flash Memory
- 1.8" TFT LCD Full-color display
- Plays Music, Video, Photos and Text
- Plays Digital Music from most online stores and subscription services**
- Music library groups music files by album name, artist name, song title, genre, year and playlist
- Integrated FM Radio and Recorder
- Voice recording through an integrated microphone
- View photos and slideshows while enjoying your music collection
- USB 2.0 high-speed transfers

** Music Service must support Windows Media DRM(WMDRM). WMDRM10 requires Windows XP and Windows Media Player 10 or newer.*

TABLE OF CONTENTS






PRECAUTIONS.....	2
IMPORTANT SAFETY INSTRUCTIONS	4
FEATURES	5
TABLE OF CONTENTS.....	6
PACKAGE CONTENTS	8
POWERING YOUR PLAYER.....	9
Charging the Battery.....	9
Turning Your Player On/Off.....	9
Locking/Unlocking Your Player's Keys (Hold)	9
Resetting Your Player	10
LOCATION OF CONTROLS	11
Top View.....	11
Front View	11
Side View	11
DISPLAY OVERVIEW	12
BASIC OPERATIONS	13
Using the Touchpad Controls	13
Using the Controls to Navigate.....	13
Main Menu Overview	13
Smart Menu Options.....	14
Browsing/Playback	14
Volume	15
EQ (Equalizer).....	15
Repeat.....	15
Shuffle.....	16
Backlight	16
MUSIC MODE.....	17
Browsing Your Music Library	17
Play All	17
Playlists	17
Music Playback Controls	17
QUICK PLAY	18
Quick Play Controls	18
PHOTO MODE.....	19
Browsing Your Photo Library	19
Displaying Your Photos as a Slideshow	19
VIDEO MODE.....	20
Browsing Your Video Library	20

TABLE OF CONTENTS

RECORD MODE.....	21
Voice Recording.....	21
BROWSER MODE	
SETTING MODE.....	22
USB CONNECTIONS.....	23
Minimum PC Requirements.....	23
USB Mode Auto-Detection (MSC/MTP).....	23
USB Driver Installation (Required for Windows 98 SE Only).....	24
Connecting to a Computer.....	25
USB-MTP Mode.....	25
USB-MSC Mode.....	26
Transferring Files.....	26
USB-MTP Mode.....	27
USB-MSC Mode.....	27
Disconnecting from a Computer.....	28
USB-MTP Mode.....	28
USB-MSC Mode.....	28
Build Music Library (USB-MSC Mode Only).....	28
VIDEO CONVERSION.....	29
Installation.....	29
Converting Video.....	29
WINDOWS MEDIA PLAYER.....	31
Windows Media Player 9 (WMP9).....	31
Music File Transfers.....	31
Windows Media Player 10 (WMP10).....	32
Music File Transfers.....	32
Creating Playlists.....	33
Automatic Windows Media Playlist Synchronization.....	35
TROUBLESHOOTING.....	38
SPECIFICATIONS.....	40

PACKAGE CONTENTS

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

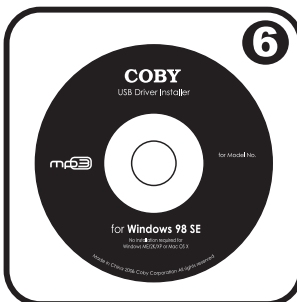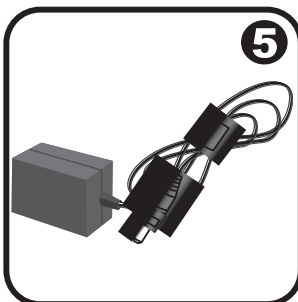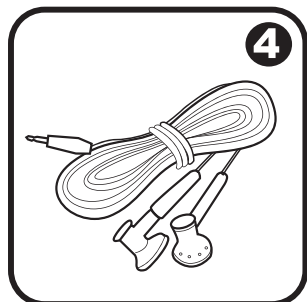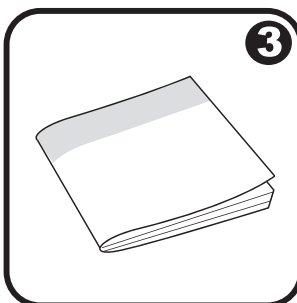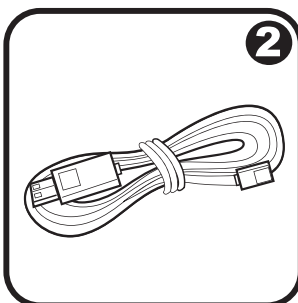

1. COBY MP-C7052 MP3 Player
2. USB Cable
3. Instruction Manual
4. Professional Stereo Earphones
5. AC Adapter
6. Installation CD

POWERING YOUR PLAYER

Charging the Battery

Your player has an integrated rechargeable battery that will provide up to 5 hours of music play time.



The battery should be charged fully (minimum 4 hours) before its initial use to ensure optimum lifetime performance.


There are two ways to charge your player:

To charge your player:

- **Charge through your computer's USB**


Port: Your player can be charged through a PC USB connection.

Plug one end of the USB cable into the player's USB port and plug the other end into the USB port of a powered-on computer.

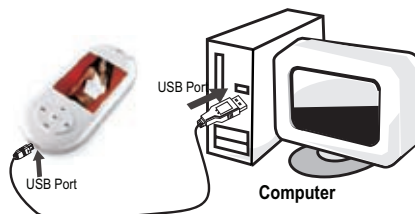

- When connected to a USB hub, the hub must be self-powered to charge the player's battery.
- File transfers will extend the charging time.

- **Charge through the supplied AC Adapter:** Plug one end of the supplied power adapter into the player's USB Port and plug the other end into a 100-240V wall outlet.

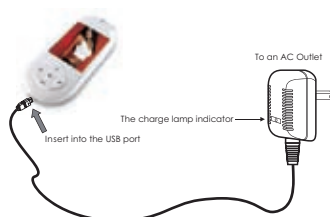

The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the battery.

Do not connect the player to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Do not handle the power plug with wet hands. Doing so may cause electric shock.

Use only AC adapters of the type specified here. Failure to do so may cause a fire or damage the player.


Turning Your Player On/Off

- To turn the player on, slide the POWER ON/OFF switch to the ON position.
- To turn the player off, slide the POWER ON/OFF switch to the OFF position.


Lock Your Player

The HOLD function disables your player's controls to prevent accidental key presses when it is in your pocket or bag.


- To lock the player, press and hold the VOL button. A Lock icon will appear on the screen.
- To unlock the player, press and hold the VOL button again.

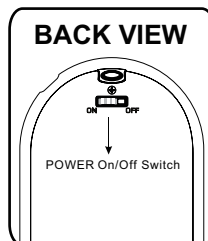

LOCATION OF CONTROLS

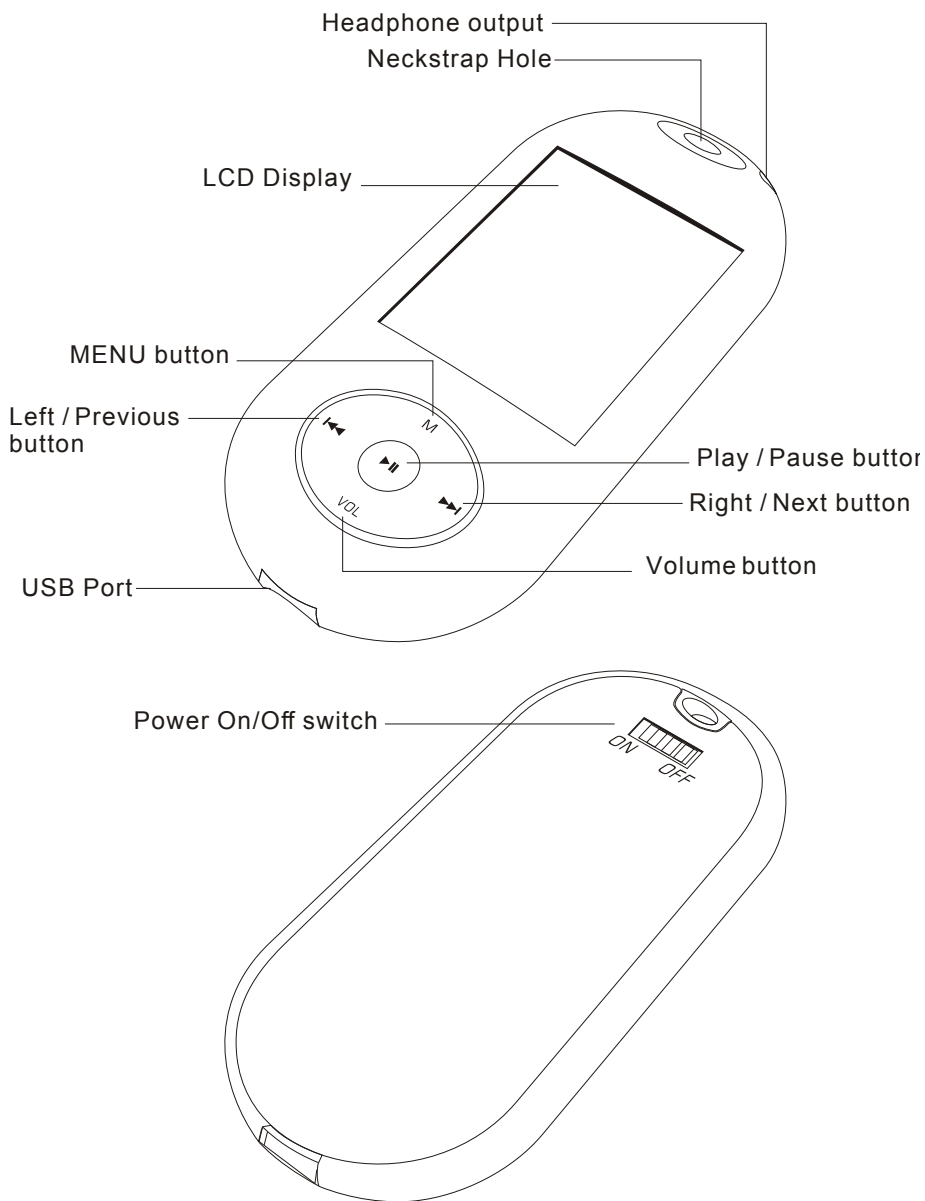

DISPLAY OVERVIEW

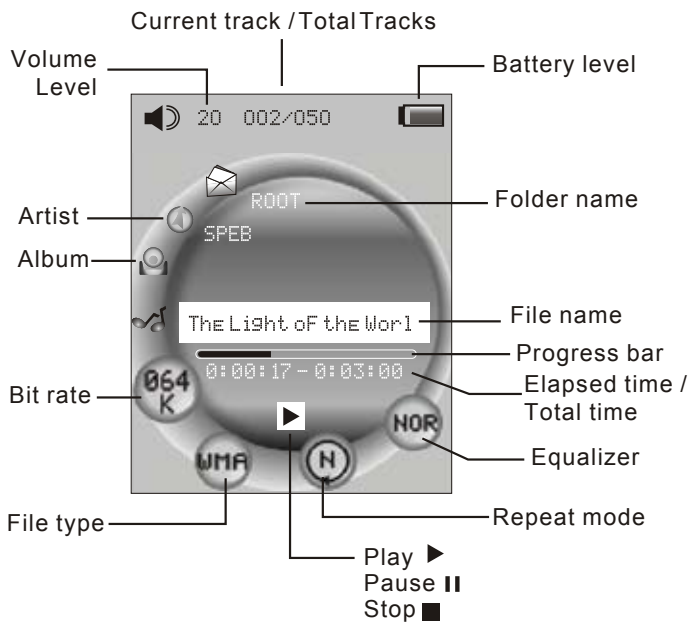

Music Playing Screen

MAIN MENU OVERVIEW

The Main Menu gives you access to the different function modes of your player. When your player is powered on, it will enter the Main Menu directly.

To return to the Main Menu at any time, press and hold the MENU button.

To select a mode, press ◀◀ or ▶▶ to highlight the mode and then press ▶▶ .

The main menu consists of items: MUSIC, MOVIE, RECORD, VOICE, FM RADIO, PHOTOS, EBOOK and SETTINGS.

For a detailed description of each item, see their respective sections of this manual.



MUSIC MODE

Enter MUSIC mode to play your MP3, WMA or WAV audio files.

Music Controls

- To play an audio track, press ►||. Press ►|| again to pause the playback.
- Press ►| to skip to the next track; press and hold ►| to fast forward through the current track.
- Press ◀| to skip to the previous track; press and hold ◀| to reverse through the current track.
- Press the VOL button first, then press ◀◀ or ►► to adjust the volume level up or down.

Playing Setting

While in music playing, press the MENU button to access the Playing Setting menu. The Playing Setting options are: Repeat, Equalizer, Tempo rate, Replay, Replay times, Replay gap and Exit.

Repeat

Adjust the Repeat Mode settings to change the order in which tracks are played. The Repeat Mode options are: Normal, Repeat One, Folder, Repeat Folder, Repeat All, Random and Intro.

Normal	Play tracks once in sequential order.
Repeat One	Play the current track repeatedly.
Folder	Play tracks in the current folder.
Repeat Folder	Repeat tracks in the current folder.
Repeat All	Play all tracks repeatedly.
Random	Play tracks in random order.
Intro	Play the first 10 seconds of each track.

- Press ◀◀ or ►► to select a Repeat option and press ►|| to confirm.
- Press the MENU button to return to the Music Playing mode without saving.

Equalizer

The digital Equalizer presets allow you to change the way music sounds on your player with Natural, Rock, Pop, Classic, Soft, Jazz and DBB.

- Press ◀◀ or ►► to select a Equalizer option and press ►|| to confirm.
- Press the MENU button to return to the Music Playing mode without saving.

Tempo rate

Use the Tempo rate function to adjust playback tempo. The options are: -8(slowest), -7, -6, -5, -4, -3, -2, -1, 0(Normal), 1, 2, 3, 4, 5, 6, 7, 8(fastest).

- Press ◀◀ or ►► to select a Tempo rate option and press ►|| to confirm.
- Press the MENU button to return to the Music Playing mode without saving.



This function only available in MP3 file playing mode.

MUSIC MODE

Replay

The section allows you to define a segment of an audio track to be played repeatedly on a loop.

- Confirm Replay section from the Play Setting menu. Replay symbol appears on the screen.
- Press ►► to set the start point of the audio segment loop. Flashing A turns to be still and "B" start to flashing.
- Press ►► again to set the end point of the audio segment loop. The screen will displays "A-B".

The audio segment will now play repeatedly in a loop.

Press the MENU button to resume normal playback.

Replay times

The section allows you to set the times that the segment you have set will play for. The options are from 1 to 10.

- Press ◀◀ or ►► to select a Reply times option and press ►► to confirm.
- Press the MENU button to return to the Music Playing mode without saving.

Replay gap

The section allows you to set the duration of time (in seconds) between each Replay segment. The options are from 1 to 10.

- Press ◀◀ or ►► to select a Reply gap option and press ►► to confirm.
- Press the MENU button to return to the Music Playing mode without saving.

Menu Setting

While in Playback pause mode, press the MENU button to access the Menu Setting menu. The menus are: Local folder, Delete, Delete all and Exit.

Local folder

Enter Local folder menu to view all audio tracks loaded on your player.

- Press ◀◀ to move the selection up; press ►► to move the selection down.
- Press ►► to confirm and play a selection.
- Press the MENU button to return to the Playback pause mode.

Delete

Enter Delete menu to delete music files from your player.

- Press ◀◀ to move the selection up; press ►► to move the selection down.
- Press ►►, the player will ask you to confirm deletion; select "Yes" and then press ►► to delete the file, select "No" to give up and select other file.
- Press the MENU button to return to the Playback pause mode.

Delete all

Enter Delete all menu to delete all music files from your player.

- Confirm Delete all section from the Menu Setting menu.
- Press ◀◀ or ►► to select "Yes" or "No", and then press ►► to confirm.
- Press the MENU button to return to the Playback pause mode.

MOVIE MODE

Enter MOVIE(Video) mode to play video files (AMV) loaded on your player.

Video Controls

- To play a video track, press ►||. To pause playback, press ►|| again.
- Press ►► to skip to the next track; press and hold ►► to fast forward through the current track.
- Press ◀◀ to skip to the previous track; press and hold ◀◀ to reverse through the current track.
- To adjust the volume level, you must in the video Playback pause mode. Press the VOL button first and then press ◀◀ or ►► to adjust the volume level up or down, respectively.

Menu Setting

While in video playback pause mode, press the MENU button to access the Menu Setting menu. The menus are: Local folder, Delete, Delete all, Repeat and Exit.

Local folder

Enter Local folder menu to view all video tracks loaded on your player.

- Press ◀◀ to move the selection up; press ►► to move the selection down.
- Press ►|| to confirm and play a selection.
- Press the MENU button to return to the Playback pause mode.

Delete

Enter Delete menu to delete video files from your player.

- Press ◀◀ to move the selection up; press ►► to move the selection down.
- Press ►||, the player will ask you to confirm deletion; select "Yes" and then press ►|| to delete the file, select "No" to give up and select other file.
- Press the MENU button to return to the Playback pause mode.

Delete all

Enter Delete all menu to delete all video files from your player.

- Confirm Delete all section from the Menu Setting menu.
- Press ◀◀ or ►► to select "Yes" or "No", and then press ►|| to confirm.
- Press the MENU button to return to the Playback pause mode.

Repeat

Adjust the Repeat Mode settings to change the order in which tracks are played. The Repeat Mode options are: Normal, Repeat One, Folder, Repeat Folder, Repeat All, Random and Introl.

- Press ◀◀ or ►► to select a Repeat option and press ►|| to confirm.
- Press the MENU button to return to the Video Playback pause mode without saving.

MOVIE MODE

Normal	Play tracks once in sequential order.
Repeat One	Play the current track repeatedly.
Folder	Play tracks in the current folder.
Repeat Folder	Repeat tracks in the current folder.
Repeat All	Play all tracks repeatedly.
Random	Play tracks in random order.
Intro	Play the first 10 seconds of each track.

RECORD MODE

Enter RECORD mode to make voice recordings through the integrated Microphone.

Upon entering RECORD mode:

1. Press the MENU button to access the Menu Setting menu.
 - **Local folder:** Select the folder that the recording file will be saved in.
 - **REC type:** Set the recording quality with 32kbps, 64kbps or 128kbps.
2. Press ►|| to start Voice Recording.

During recording:

 - To pause recording, press ►|| ; press ►|| again to resume recording.
 - To stop and save the recording, press and hold the MENU button. The recorded file will be named "RECXXX.WAV"(32kbps or 64kbps) or "RECXXX.MP3" (128kbps)where XXX corresponds to the numerical sequence in which the recording was made (numbering starts from 001).



The quality of RECXXX.MP3 will be better than RECXXX.WAV, please refer to "Main Menu > SETTINGS > REC type" section for more details.

VOICE MODE

Enter VOICE mode to play your digital voice recording files.

Voice Controls

- To play a voice file, press ►||. Press ►|| again to pause the playback.
- Press ►► to skip to the next track; press and hold ►► to fast forward through the current track.
- Press ◀◀ to skip to the previous track; press and hold ◀◀ to reverse through the current track.
- Press the VOL button first, then press ◀◀ or ►► to adjust the volume level up or down.

Play Setting

While in voice playing, press the MENU button to access the Playing Setting menu. The Playing Setting options are: Repeat, Tempo rate, Replay, and Exit.

Repeat

Adjust the Repeat Mode settings to change the order in which tracks are played. The Repeat Mode options are: Normal, Repeat One, Folder, Repeat Folder, Repeat All, Random and Intro.

Normal	Play tracks once in sequential order.
Repeat One	Play the current track repeatedly.
Folder	Play tracks in the current folder.
Repeat Folder	Repeat tracks in the current folder.
Repeat All	Play all tracks repeatedly.
Random	Play tracks in random order.
Intro	Play the first 10 seconds of each track.

- Press ◀◀ or ►► to select a Repeat option and press ►|| to confirm.
- Press the MENU button to return to the Music Playing mode without saving.

Tempo rate

Use the Tempo rate function to adjust playback tempo. The options are: -8(slowest), -7, -6, -5, -4, -3, -2, -1, 0(Normal), 1, 2, 3, 4, 5, 6, 7, 8(fastest).

- Press ◀◀ or ►► to select a Tempo rate option and press ►|| to confirm.
- Press the MENU button to return to the Music Playing mode without saving.

VOICE MODE

Replay

The section allows you to define a segment of an audio track to be played repeatedly on a loop.

- Confirm Replay section from the Play Setting menu. Replay symbol appears on the screen.
- Press ►► to set the start point of the audio segment loop. Flashing A turns to be still and "B" start to flashing.
- Press ►► again to set the end point of the audio segment loop. The screen will displays "A-B".

The audio segment will now play repeatedly in a loop.

Press the MENU button to resume normal playback.

Menu Setting

While in Voice Playback pause mode, press the MENU button to access the Menu Setting menu. The menus are: Local folder, Del file?, Del all? all and Exit.

Local folder

Enter Local folder menu to view all audio tracks loaded on your player.

- Press ◀◀ to move the selection up; press ►► to move the selection down.
- Press ►|| to confirm and play a selection.
- Press the MENU button to return to the Voice Playback pause mode.

Delete

Enter Delete menu to delete voice files from your player.

- Press ◀◀ to move the selection up; press ►► to move the selection down.
- Press ►||, the player will ask you to confirm deletion; select "Yes" and then press to delete the file, select "No" to give up and select other file.
- Press the MENU button to return to the Voice Playback pause mode.

Delete all

Enter Delete all menu to delete all voice files from your player.

- Confirm Delete all section from the Menu Setting menu.
- Press ◀◀ or ►► to select "Yes" or "No", and then press ►|| to confirm.
- Press the MENU button to return to the Voice Playback pause mode.

FM RADIO MODE

Enter FM Radio Mode to listen the FM Radio broadcasts.



You must have a pair of headphones connected to the headphone jack to receive FM broadcasts; your player will utilize the headphone cord as an antenna.

Basic FM Radio Operation

Upon entering FM Radio mode, you can tune into stations manually(Normal) or by using preset stations(Preset).

- Press **▶||** to enter Preset tuning modes. Press **◀◀** or **▶▶** to listen FM Radio with Normal mode.
 - Normal: Listen to Manually-Tuned Channels.
 - Press **▶▶** to tune to higher frequencies; press **◀◀** to tune to lower frequencies. Preset: Listen to Preset Channels.
- Press **▶||** to tune to the next Preset channel.
- To auto-seek the next available broadcast station, press and hold **◀◀** or **▶▶**.

Menu Setting

Press the MENU button to access the Menu Setting menu in FM Radio Mode.

The options are Save, Record, Delete, Delete All, Auto Search, Normal Band, Japan Band, and Exit.

Save

This option allows you to manually save the current station as a preset.

1. Tune to the station you want to store (e.g., 105.1).
2. Select and confirm "Save" from the Menu Setting menu, and press **▶||** to save the station as a preset number "CHXX" where XX corresponds to the numerical sequence in which the station was saved (Number starts from 01, you can save up to 20 station presets: 01-20).

Delete

This section allows you to delete preset stations.

1. Tune to the preset station you want to delete.
2. Select and confirm "Delete" from the Menu Setting menu, and press **▶||** to delete.

Delete All

This section allows you to delete all preset stations.

1. Select and confirm "Delete All" from the Menu Setting menu.
2. Press **▶||** to delete all the preset stations.

Auto Search

This section allows you automatically detect and save any frequency as a preset station with a signal. This will overwrite any previously saved preset stations.

1. Select and confirm "Auto Search" from the Menu Setting menu.
2. Press **▶||** to start to scan all frequencies.

FM RADIO MODE

Normal Band

This section allows you set the FM frequency range area as Normal band(US).

- Highlight and confirm Normal Band from the Smart Menu.

Japan Band

This section allows you set the FM frequency range area as Japan Band.

- Highlight and confirm Finder Presets.. from the Smart Menu.

Record

Make digital recordings of FM radio broadcasts.

1. Tune to the broadcast you wish to record.
2. Select and confirm Record from the Menu Setting menu.
3. Press the MENU button to access the Menu Setting menu.
 - **Local folder:** Select the folder that the recording file will be saved in.
 - **REC type:** Set the recording quality with 32kbps, 64kbps or 128kbps.
4. Press ►|| to start FM Recording.

During recording:

- To pause recording, press ►|| ; press ►|| again to resume recording.
- To stop and save the recording, press and hold the MENU button. The recorded file will be named "RECXXX.WAV"(32kbps or 64kbps) or "RECXXX.MP3" (128kbps)where XXX corresponds to the numerical sequence in which the recording was made (numbering starts from 001).



The quality of RECXXX.MP3 will be better than RECXXX.WAV, please refer to "Main Menu > SETTINGS > REC type" section for more details.

PHOTOS MODE

Enter PHOTOS mode to display your JPEG photo files.

Browsing Your Photo Library

Upon entering Photo mode, you will see a preview list of all JPEG photos on your player.

- Press ◀◀ or ▶▶ to highlight a photo and press ▶| to display.
- While a photo is displayed:
 - Press ▶▶ to display the next photo in the list.
 - Press ◀◀ to display the previous photo in the list.
 - Press ▶| to stop display and return to the photo list.

Menu Setting

While in Photo list mode, press the MENU button to access the Menu Setting menu. The options are: Local folder, Play set, Delete and Delete all.

Local folder

Enter Local folder section to view all photos that located on your player.

- Press ◀◀ to move the selection up; press ▶▶ to move the selection down.
- Press ▶| to confirm and display a selection.
- Press ▶| again to stop display and return to the photo list mode.

Play set

This section allows you to set the viewer display photos with manual control (Manual Play) or as a slideshow (Auto Play).

- Select and confirm Play set from the Menu Setting menu.
- Press ◀◀ or ▶▶ to select a Play set option (Manual Play or Auto Play).
- Press ▶| to confirm.

Delete

This section allows you to delete photos that located on your player.

- Select and confirm Delete from the Menu Setting menu.
- Press ◀◀ or ▶▶ to highlight the photo that you wish to delete.
- Press ▶| . The player will ask you to confirm deletion, press ◀◀ or ▶▶ to select "Yes" or "No" and then press ▶| to confirm.

Delete all

This section allows you to delete all photos that located on your player.

- Select and confirm Delete all from the Menu Setting menu.
- Press ▶| . The player will ask you to confirm deletion, press ◀◀ or ▶▶ to select "Yes" or "No" and then press ▶| to confirm.

EBOOK MODE

Enter EBOOK mode to find and play text files (TXT) located on your player.

Browsing Your Text Library

Upon entering EBOOK mode, you will see a preview list of all text files on your player.

- Press ◀◀ or ▶▶ to highlight a text file and press ▶|| to display.
- While a text file is displayed:
 - Press ▶▶ to skip to the next page.
 - Press ◀◀ to skip to the previous page.
 - Press ▶|| to stop display and return to the text files list mode.



When the text file is to be paged to the last page, press ▶|| will cancel and return to the text files list mode too.

Menu Setting

While in text files list mode, press the MENU button to access the Menu Setting menu. The options are: Local folder, Play set, Delete and Delete all.

Local folder

Enter Local folder section to view all text files that located on your player.

- Press ◀◀ to move the selection up; press ▶▶ to move the selection down.
- Press ▶|| to confirm and display a selection.
- Press ▶|| again to stop display and return to the text files list mode.

Play set

This section allows you to set the player display text files with manual control(Manual Play) or auto page (Auto Play).

- Select and confirm Play set from the Menu Setting menu.
- Press ◀◀ or ▶▶ to select a Play set option (Manual Play or Auto Play).
- Press ▶|| to confirm.

Delete

This section allows you to delete text files that located on your player.

- Select and confirm Delete from the Menu Setting menu.
- Press ◀◀ or ▶▶ to highlight the text file that you wish to delete.
- Press ▶|| . The player will ask you to confirm deletion, press ◀◀ or ▶▶ to select “Yes” or “No” and then press ▶|| to confirm.

Delete all

This section allows you to delete all text files that located on your player.

- Select and confirm Delete all from the Menu Setting menu.
- Press ▶|| . The player will ask you to confirm deletion, press ◀◀ or ▶▶ to select “Yes” or “No” and then press ▶|| to confirm.

Bookmark Controls

SETTINGS MODE

Enter the *SETTINGS* mode to set your player's system options.

Upon entering Setting mode, you will have the following options: System Time, REC type, LCD set, Language, Power off, Replay mode, Online Device, Online Mode, Memory info, Firmware version, Firmware upgrade, Disk Format and Exit.

Press **◀◀** or **▶▶** to select a setting and press **▶||** to confirm. Press the MENU button to back to the previous menu.

System time

Set the internal clock of your player.

1. Press the VOL button to select which date or time field to adjust.
 - For the date, the fields are Year, Month, and Date (from left to right).
 - For the time, the fields are Hour, Minute, and Seconds (from left to right).
2. Press **◀◀** or **▶▶** to adjust the value of the selected fields. Press the VOL button to the next field.
3. Press the MENU button to save and return to the SETTINGS mode.

REC type

Select and confirm REC type in the setting menu to set options relating to your player's Recording Quality. The REC type options are: Voice record, WAV record and MP3 record.

High-quality(MP3 record) recordings will sound best, but will take up more of the player's memory.

1. Press **◀◀** or **▶▶** to select a REC type option.
2. Press **▶||** when you are finished to save.
3. Press the MENU button to return to the SETTINGS mode without saving.

LCD set(Dark Mode)

Set the duration of time (in seconds) that the LCD backlight remains on after a key-press.

1. Press **◀◀** or **▶▶** to select a time(5s, 10s, 15s, 30s or Always on).
2. Press **▶||** when you are finished to save.
3. Press the MENU button to return to the SETTINGS mode without saving.



A setting of "Always on" will keep the LCD on at all times.

Language

Set the language of the player's on screen menu. The language options are: Simple Chinese, English, Trad Chinese, French, German, Italian, Dutch, Portuguese, Spanish, Swedish, Danmark and Russian.

1. Press **◀◀** or **▶▶** to select a language option.
2. Press **▶||** when you are finished to save.
3. Press the MENU button to return to the SETTINGS mode without saving.

SETTING MODE

Power off

Set the Off time and Sleep time.

- **Off time**

Set the duration of time that your player will remain on for when it is idle. The options are: 1 minute, 3 minutes, 5 minutes, 10 minutes and Always on.

- Press **◀◀** or **▶▶** to select a Off time option.
- Press **▶||** when you are finished to save.
- Press the MENU button to return the Power off setting menu without saving.

- **Sleep time**

Set the duration of time(in minutes) that your player will shut off after the preset time is due.

The options are: 0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100, 110 and 120.

- Press **◀◀** or **▶▶** to select a Sleep time option.
- Press **▶||** when you are finished to save.
- Press the MENU button to return to the Power off setting menu without saving.

Replay mode

Set the replay mode within Manual replay and Auto replay.

Online Device

Set the Online Device within Media Device and USB Disk when you connect the player to a computer.

If you are using Windows Media Player 10 (WMP10) and set the Online Device to Media Device, WMP10 will synchnorize with your player automatically upon connection. And set to USB Disk will stop auto-synchnorization with WMP10 during connection, it will be used as a normal USB device.

- Press **◀◀** or **▶▶** to select a Online Device option.
- Press **▶||** when you are finished to save.
- Press the MENU button to return to the SETTINGS menu without saving.

Online mode

Set the Online mode with Multi Device, Normal Only or Encrypted Only.

Memory info

View memory information.

Firmware version

View firmware information.

Firmware upgrade

Select to upgrade firmware. (Please refer to Firmware Upgrade section for details.)

SETTING MODE

Format

Format the player with FAT16 or FAT32 type. It may become necessary to format your player if data or files become corrupt. Andways use the Format function of the player when it is necessary to format the disk.



Format will destroy all data on a disk so make sure to back up your data before formatting the disk.

USB CONNECTIONS

Connect the MPC7052 to a computer with the USB 2.0 cable provided to:

- Transfer files to and from your player
- Perform basic file management functions.

USB Driver Installation (Required for Windows 98 SE Only)

It is not necessary to install the USB driver if your computer is running Microsoft Windows ME/2000/XP or newer, or Macintosh OS X. Computers running these operating systems will recognize your player automatically when connected.

If your computer is running Windows 98 SE:

1. Insert the Installation CD into your computer's CD or DVD drive. Make sure to place the mini-CD in the center, recessed well of the drive tray.
2. Navigate to MY COMPUTER and double-click on the CD/DVD drive icon (usually "D:").
3. Double-click on the folder "Win98 USB Drivers" and then on the folder "english".
4. Double-click on the SETUP icon (SETUP.EXE) to start the USB driver installation program.
5. Follow the on-screen instructions to complete the installation and then restart your computer.




Mini-CDs should only be used in normal tray-loading CD/DVD drives. Mini-CDs may be used in slot-loading drives with the proper adapter; please contact your computer or drive manufacturer for more information.

Connecting to a Computer

Connect the player to your computer with the supplied USB cable. Upon connection:

- Your computer will automatically recognize the player as an MTP Device. An icon representing your player will appear under "Audio Devices" when you open "My Computer".
- It may take Windows several minutes to recognize and set up the device the first time it is connected depending on your hardware configuration.

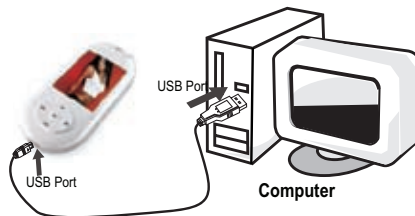

For more information and support regarding music transfer and synchronize with Windows Media Player (WMP), please see the help section including with WMP (Click Help > Synchronizing Content to Devices).

Transferring Files

The USB 2.0 High-Speed connection makes it easy to transfer music, video, photo, and text files (or any other data) quickly between the player and your computer. Simply use the player as you would a floppy disk using basic operating system commands.

USB CONNECTIONS


If you need further assistance with transferring files, please refer to your operating system's instruction manual or on-screen help. If you are using media management software such as iTunes, Winamp, or Windows Media Player, please refer to their documentation for support.



Do not disconnect or otherwise interrupt the player during transmission - this could damage or corrupt the player's firmware or your files. If the player is accidentally disconnected and is not working properly, reset your player (see the [Powering Your Player](#) section for details).

Microsoft Windows

1. Double-click the "My Computer" icon on your desktop and then double-click the MPC7052 icon (MTP Multimedia Player).

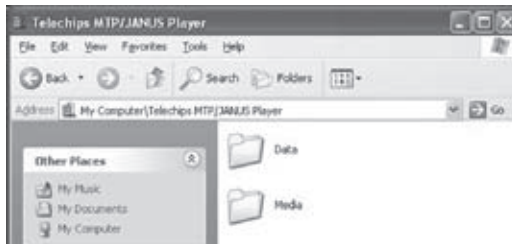

2. Your player contains two folders: Data and Media.
 - Drag your media files to the Media folder (e.g., MP3, WMA files).
 - Drag all other types of files to the Data folder for storage. Data files are only visible from a computer; these files will not be available from within the player itself.

Macintosh OS X

1. Open a finder window. Located the files you would like to transfer from your computer. Select the files/folders with the mouse and press APPLE-C(copy) on the keyboard.
2. Click on the Removable Disk icon located on the left side of the finder window. The computer will display all files and folders currently stored in the player.
3. Press APPLE-V(paste) on the keyboard to transfer the files you selected in Step 1 to the player.

USB CONNECTIONS

Disconnecting from a Computer

Disconnect your player as instructed below to detect data loss or file/firmware corruption.

Microsoft Windows

1. Double-click the green arrow in the taskbar located on the lower-right side of the computer screen (Safely Remove Hardware).



2. **Safely Remove Hardware:**

Select "USB Mass Storage Device" from the list that appears and then click on "Stop".



Stop a Hardware Device: Select "USB Mass Storage Device" from the list that appears and then click on "OK".

3. When the "Safe to Remove Hardware" window appears, click the OK button and disconnect the USB cable from the player and your computer.

Macintosh OS X

1. On the left side of the Finder Window, identify the appropriate Removable Disk icon.
2. Click on the "Eject" arrow on the right of the Removable Disk icon.
3. Disconnect the USB cable from the player and your computer.



VIDEO CONVERSION

Use the video conversion software utility included on the Installation CD to create video files that are suitable for playback on the MP-C7052.

Your player supports AMV files with the following specifications:

- 160 x 128 resolution at 15 frames per second (fps)


Installation

Please refer to the Installation CD for software installation procedures.

Converting Video

1. Find and select the video files to convert in the INPUT field.
2. Find and select the directory location to save the converted file to.
3. Set the start and end point of the video that will be converted.
4. Click

When the conversion is complete, copy the converted files to your player for playback.

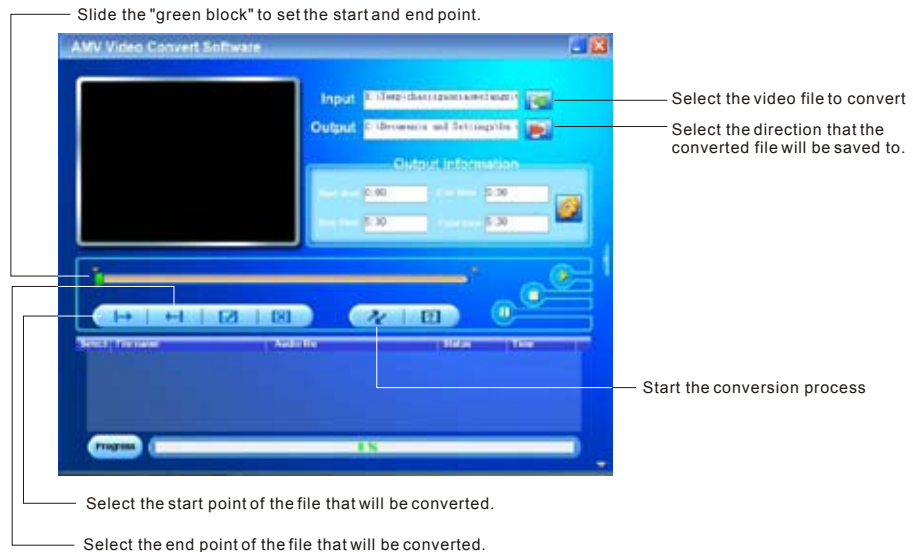

VIDEO CONVERSION

Note:

The video conversion software is included for your convenience and is compatible with Microsoft Windows operating systems only. There are many other video conversion utilities available for download or purchase on the internet.

Because the program is licensed free of charge, there is no warranty for the program, to the extent permitted by applicable law. Except when otherwise stated in writing the copyright holders and/or other parties provide the program "as is" without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The entire risk as to the quality and performance of the program is with you. Should the program prove defective, you assume the cost of all necessary servicing, repair or correction.

In no event unless required by applicable law or agreed to in writing will any copyright holder, or any other party who may modify and/or redistribute the program as permitted above, be liable to you for damages, including any general, special, incidental or consequential damages arising out of the use or inability to use the program (including but not limited to loss of data or data being rendered inaccurate or losses sustained by you or third parties or a failure of the program to operate with any other programs), even if such holder or other party has been advised of the possibility of such damages.

FIRMWARE UPGRADE

IMPORTANT: Make sure your palyer has been fully charged before upgrading your firmware. Do not disconnect your player from the computer or otherwise interrupt the upgrade process - doing so could damage your player and render it inoperable.

Firmware updates may be found on the COBY Electronics website at www.cobyusa.com. Check this site periodically for new updates. Firmware updates may add new functionality to your player.

You need to install the Firmwar software (MP3 Player Product Tool) from the supplied instalaltion CD first.



You must set the Online Device option to USB Disk in the SETTINGS menu.

To upgrade your player's firmware:

1. Download the latest firmware for your palyer from www.cobyusa.com. Save this file to the comoputer.
2. Connect your player to the computer (see the "Connect to a Computer" section for details.)
3. Run the firmware program. (ie, Click "Start" > "Programs" > "MP3 Player Product Tool 4.22" > "Product Tool")
4. The updater will commence searching for your connected player. When it has detected your player, the firmware update screen will appear (see figure at the below).
5. Click "Start" to begin the firmware update. Do NOT disconnect your player while it is updating.
6. The update is complete when the status bar has been filled. Click "Close".
7. Disconnect your player from the computer.

WINDOWS MEDIA PLAYER

Windows Media Player 9 (WMP9)

You can use Windows Media Player 9 (WMP9) and a USB-MSC connection to manage your music media library with Microsoft Windows 98SE/ME/2000.

Music File Transfers

To transfer files using WMP9:

1. Run Window Media Player 9
2. Connect your player to the computer
3. Select "Copy to CD or Device".
4. Drag the desired songs, photos, or converted video files from the PC to the left pane.
5. Select "Removable Disk".
6. Click "Copy".



WINDOWS MEDIA PLAYER


Windows Media Player 10 (WMP10)

You can use Windows Media Player 10 (WMP10) and a USB-MTP connection to manage your music media library with Microsoft Windows XP or newer.

Music File Transfers


To transfer files using WMP10:

1. Run Window Media Player 10
2. Connect your player to the computer. A "Device Setup" window will appear.
3. In the "Device Setup" window, choose "Synchronize this device with this library for this session only" and click "Finish".
4. Select "Sync". There are 2 ways to sync your files with your player:
 - **Drag your songs, photos, or converted video files to the sync list on the left hand side.** Click "Start Sync" to start transferring the selected files.

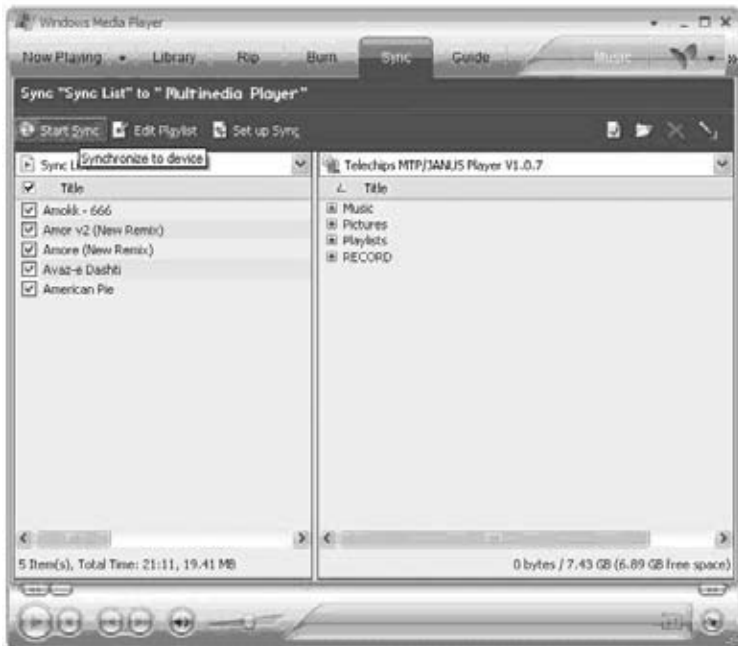

WINDOWS MEDIA PLAYER

- **Select a playlist from the “Sync List” drop-down menu.** Click “Start Sync” to start transferring the files in the selected playlist.

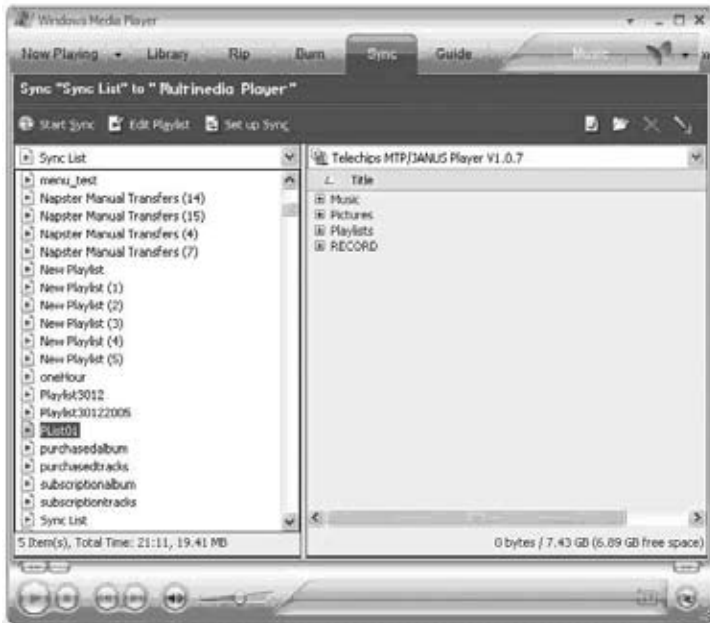

For more information and support regarding music transfer and synchronization with Windows Media Player (WMP), please see the help section included with WMP (click Help > Synchronizing Content to Devices).

Creating Playlists


Playlists are an easy way to organize and store your favorite music mixes so you can listen to them whenever you want.

When a playlist is transferred using Windows Media Player, every song in the playlist will be transferred as well.


WINDOWS MEDIA PLAYER

To create playlists using WMP10:

1. Run Window Media Player 10
2. Select “Library” and then drag the desired song(s) to the “Now Playing List” on the right side.

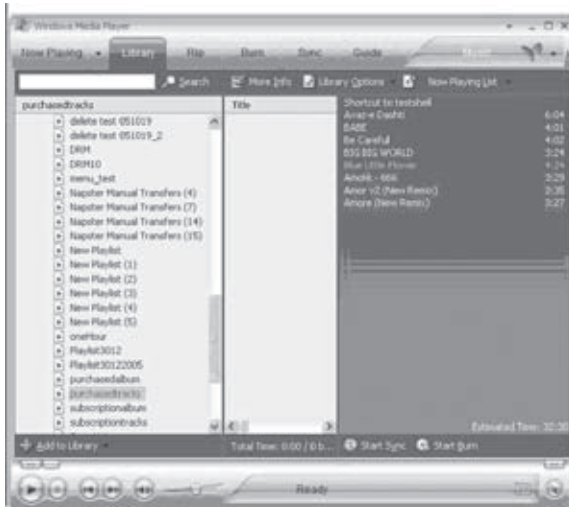


3. Highlight all of the songs in the “Now Playing List” and then use the mouse to right-click the list. Choose “Add to” and then “Additional Playlists...”

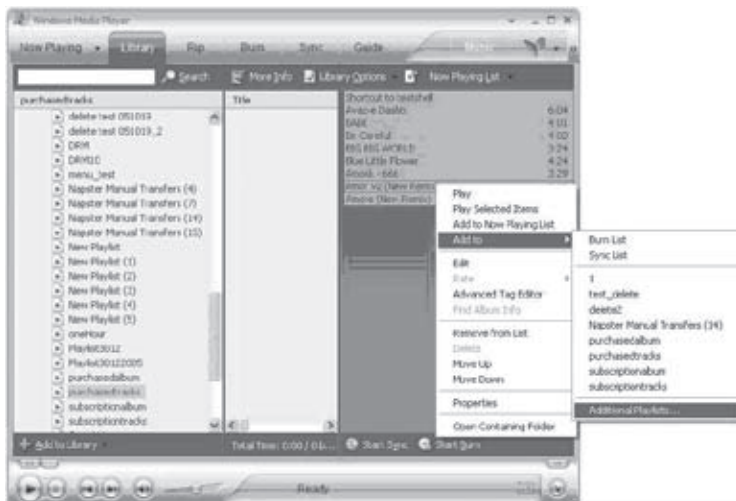

An “Add to Playlist” window will appear.

WINDOWS MEDIA PLAYER

4. Select “New” and enter the playlist name, then click “OK”. A new playlist will be created.

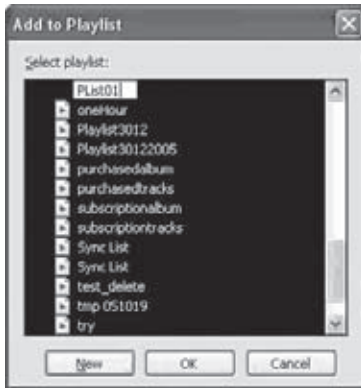


Automatic Windows Media Playlist Synchronization

By default, WMP is set to transfer and synchronize files manually. You can choose to have Windows Media Player automatically synchronize your playlists when you connect your player to the computer.


To change the synchronization settings:

1. Connect your player with the computer and run Window Media Player 10.
2. In the SYNC menu, click the “Set up Sync” button. A “Synchronization Settings” window will appear.
3. Check “Synchronize device automatically” and check the playlist(s) you want to sync.

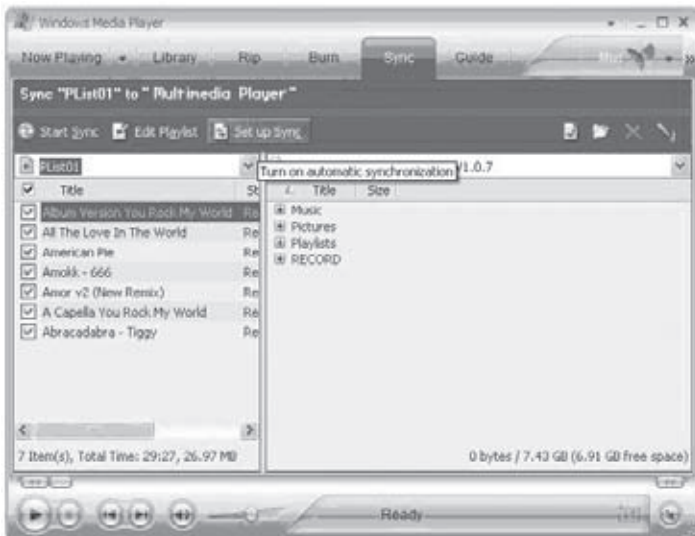

WINDOWS MEDIA PLAYER

4. Click “OK” to start the synchronization.

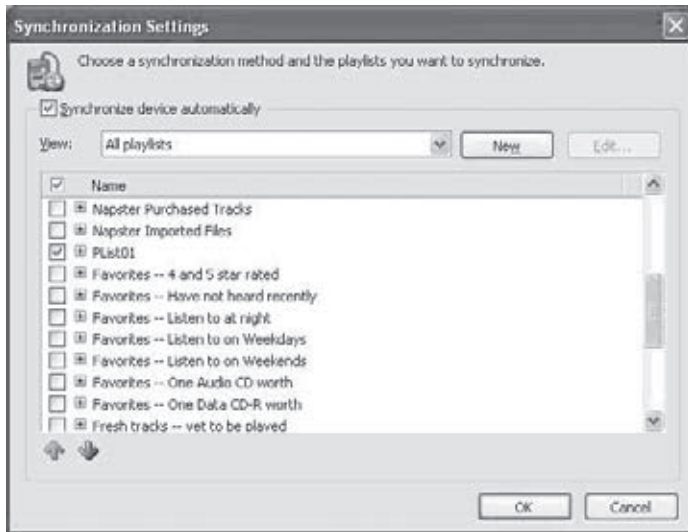

5. When synchronization is complete, disconnect your player from the computer.
6. Turn on your player and select “Music”.
7. The synchronized playlist(s) from WMP will have been added under the “Playlist” category.

TROUBLESHOOTING

If you have a problem with this player, please read the troubleshooting guide below and check our website at www.cobyusa.com for Frequently Asked Questions (FAQs) and firmware updates. If these resources do not resolve the problem, please contact Technical Support.

COBY Electronics Technical Support

Hours: Monday to Friday, 8:30 AM–11:00 PM EST
Saturday to Sunday, 9:00 AM–11:00 PM EST

Email: techsupport@cobyusa.com

Phone: 800-681-2629 or 718-416-3197

Web: www.cobyusa.com

The player does not turn on.

- The battery level may be too low. Try charging the player or operate the player on AC power.
- Ensure that the Lock switch is disengaged.
- Reboot the player (slide and hold the Power/Lock switch to the right for several seconds) and try again.

The player does not turn charge when connected to a computer (USB charge).

- Reboot the player (slide and hold the Power/Lock switch to the right for several seconds) and try again.

There is no sound during playback.

- Check the volume level.
- Ensure that the headphones are attached securely to the player.

The sound quality of the music is poor.

- Try playing the file on your computer. If the sound quality is still poor, try downloading the file again or re-encoding the file yourself.
- Ensure that the bit rate of the file is not too low. The higher the bit rate of the file, the better it will sound. The minimum recommended bitrate is 128kbps for MP3s and 96kbps for WMAs.
- Ensure that the headphones are attached securely to the player.

The buttons do not work.

- Ensure that battery is charged or that the player is operating on AC power.
- Ensure that the Lock switch is disengaged.

The player will not play my music file.

- Ensure that the file is in a compatible format (MP3, WMA, or WAV).
- The file may be copy-protected. Use Windows Media Player to transfer the file.
- The file may be copy-protected. Ensure that the license has not expired.

The LCD characters are corrupted.

- Ensure that the correct language has been selected. Try transferring some songs and restart the player to automatically rebuild the Music Library.

TROUBLESHOOTING

The player will not play my video file.

- Ensure that the video file will play on your computer using Windows Media Player 10. If the file works on the computer, use the same computer to convert the video.

I cannot transfer files to the player.

- Ensure that your computer is running a supported operating system.
- If you are running Microsoft Windows 98 SE, ensure that the USB driver has been properly installed.
- Ensure that the supplied USB cable is securely attached to the player and the PC, or try using another USB cable.
- If you have connected the player through a USB hub, try connecting the player directly to your computer.
- Ensure that the player's memory capacity is not full.
- Ensure that there are less than 2500 items loaded on the player.

I transferred files to my player but they are missing from the Music Library

- Ensure that the file is in a supported format (MP3, AVI, JPG, WAV, WMA).
- Ensure that there are less than 2500 items loaded on the player.
- If the player is in MTP mode, ensure that there are less than 2500 items loaded on the player.

I cannot see some files on my computer.

- Ensure that the correct USB mode is in use (MSC or MTP). Files transferred in one mode will not be seen when connected in another mode.

The player has malfunctioned.

- Reboot the player (slide and hold the Power/Lock switch to the right for several seconds).
- Try updating the player's firmware. Please refer to the [Firmware Update](#) section of this manual for detailed instructions.

SPECIFICATIONS

Display Type	1.8" True-Color OLED
Display Resolution	160 x 128
Memory	512MB Flash
Audio Format Support	MP3, WMA, WAV
Video Format Support	AMV: 160 x 128, 15fps
Photo Format Support	JPEG
Song Info Support	ID3, Windows Media
PC Interface	USB 2.0 High-Speed
DRM Support	Windows Media DRM 10 (Requires Windows XP and Windows Media Player 10 or higher) Windows Media DRM 9 (Requires Windows 98SE and Windows Media Player 9 or higher)
Plug and Play Support	Windows 98SE/2000/ME/XP or newer
Audio Output	3.5mm Stereo (Headphone)
Audio Input	Integrated Microphone
Menu Language Support	English, Spanish, Portuguese
Power Supply	Integrated Rechargeable Lithium-ion Battery USB Charge
Unit Dimensions	1.66" x 3.5" x 0.45" (WHD)
Weight	2.1 oz

Specifications and manual are subject to change without notice.

7052ACD10

NOTES

NOTES

COBY Electronics Corp.

56-65 Rust Street
Maspeth, NY 11378

www.cobyusa.com
www.ecoby.com